

HL-2140 and HL-2240

Toner Light Reset

1. Power Unit off
2. Open front cover
3. Press and hold GO and turn power on
4. When all 3 lights lit release and press GO twice
5. All lights turn solid
6. With all solid, press GO 5 times
7. Ready light GOes red
8. Close door and you're all set

Drum Light Reset

Simply open the front cover, and hold the "GO" button until all four LED's are lit. Release the "GO" button and close the front cover.

MFC-7340

Toner Low/End Warning

1. Open front cover where toner inserts
2. Press the "clear/back" button. It may display "replace drum?". Do not respond to this.
3. press *00. A message "accepted" will be displayed

The toner warning should then be cleared.

Drum Warning Reset

With the power on, open the front door, where you installed the drum. Press the CLEAR button. The display will ask something like, "Change Drum? Press 1 for yes. Press 2 for no."

Press 1.

Close the front door.